 
 


CleanRite[✓] **PORTABLE CARPET CLEANER**


MANUAL

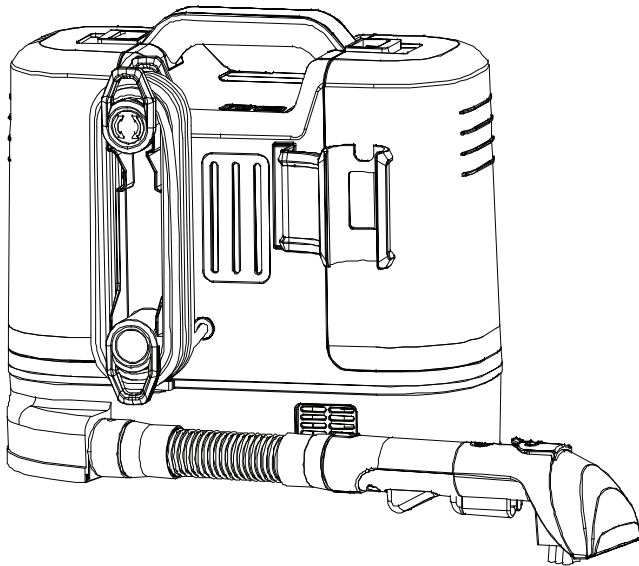

Artikelnr: 4328 - Batchcode: 23C50

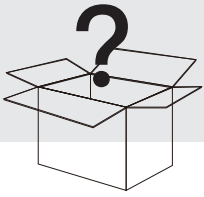

Packing Details

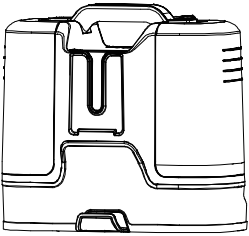


Machine



Quick Release
Cord Wrap




Flex Hose Clip

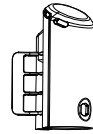

Self-cleaning
Brush



Additional Tool
Storage

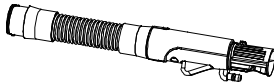

Hose Connection Tool




Standard Brush




Pet Brush



Catalog

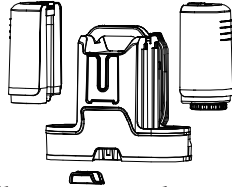


Installation procedure 04

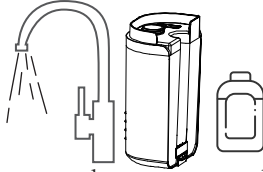

Steps to use clean water tank 05




Cleaning Steps 06

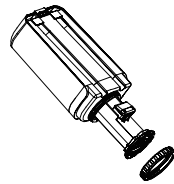


..... 08
Sewage tank use steps




..... 09
Keep Clean

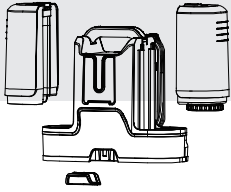


Installation procedure

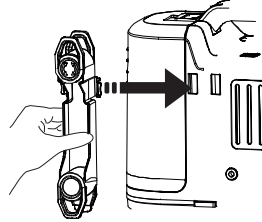


1. Attach Quick Release Cord Wrap by snapping into the slot on the back left side of the machine

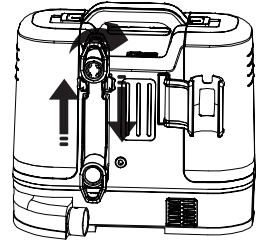


2. Wrap the power cord around the Cord Wrap

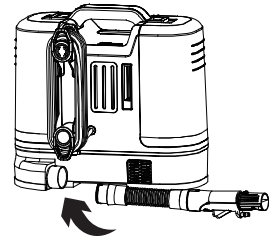


3. Connect the hose tool

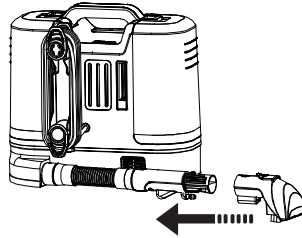


4. Connect the brush tool to adaptor tool

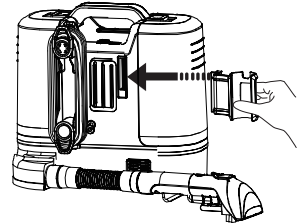


5. Snap the Hose Grip Bracket into the slot on the back right side of the machine.

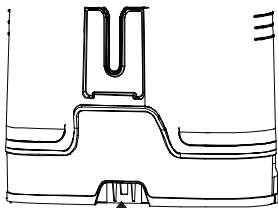


6. Slide the Flex Hose Clip into the slot found on front of the machine at the bottom. You should here a "snap" when it's locked in

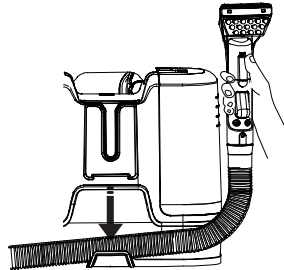

7. Wrap the Flex Hose around the machine and snap Hose Grip into bracket.

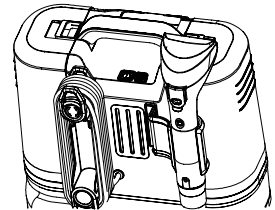


8. Make sure this brush totally ed on this additional Tool Storage

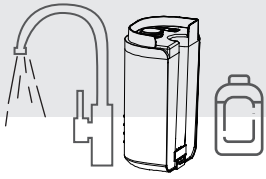


Steps to use clean water tank




1. Remove the Clean Water Tank vertically by pulling the button of the tank. 1

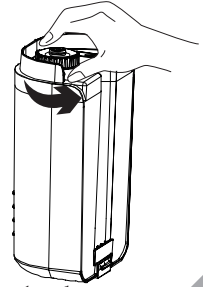


2. Twist the clean water tank cap. 2

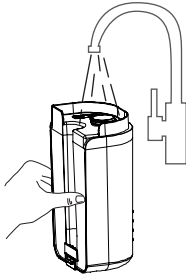


3. Add some water in this tank. 3

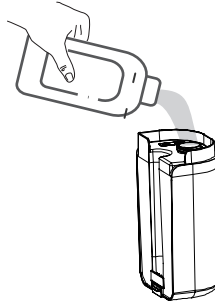

4. Add formula to the indicated fill line on the tank. 4


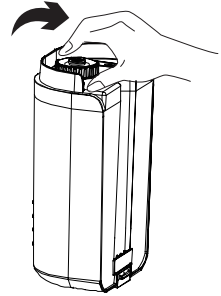


5. Make sure the water tank cap is firmly tightened. 5

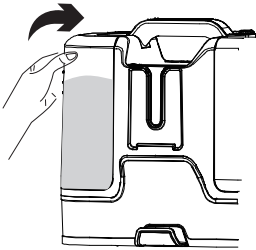


6. Place clean tank onto this machine. 6


Cleaning Steps

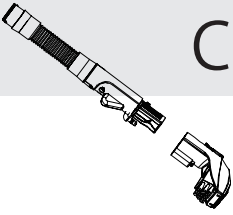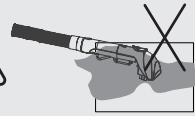


1. Pls make sure all can be wet cleaning before using this machine to cleaning.

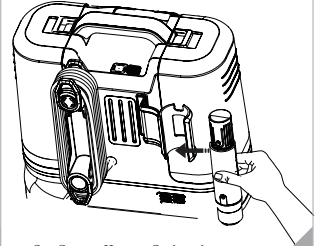


2. Snap Hose Grip into the machine bracket.

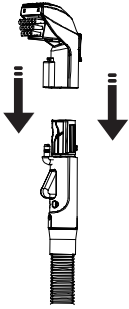


3. Connect the brush tool to adaptor tool.

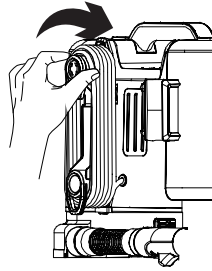


4. Twist the Quick Release Cord Wrap.

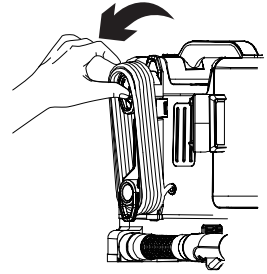

5. Release the power cord.


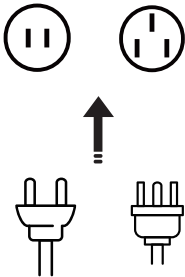


6. Plug in electrical power outlet

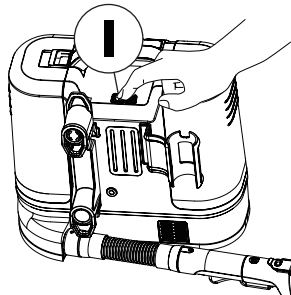


7. Plug in electrical power outlet



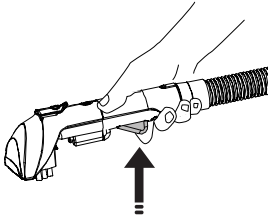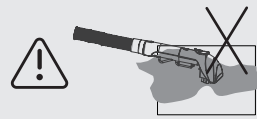


8. Switch the button on the hose grip.

8

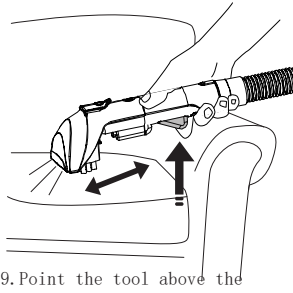


9. Point the tool above the spot or stain and press the spray trigger.

9

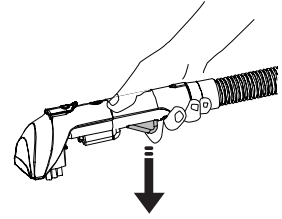


10. Loosen the button on the hose grip.

10

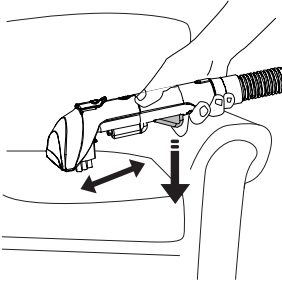


11. Place the brush onto carpet and slowly moving backwards.

11

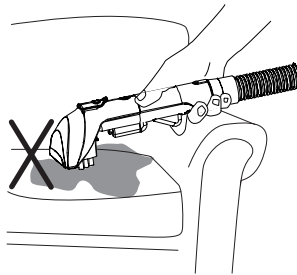


12. Do not use too much deep cleaning formula when using.

12

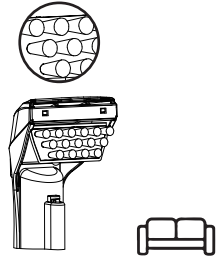

13. The standard brush is flocked fabric material.


13

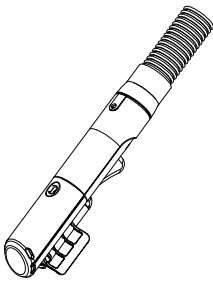


14. Turn on this machine and switch the button of the adaptor tool, self-cleaning function is on for 30 seconds.

14




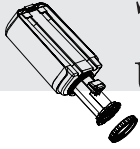


Sewage tank use steps

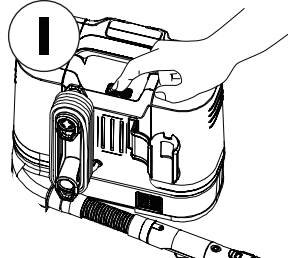


1. Turn off the machine. 1

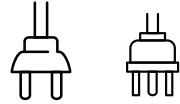


2. Unplug from the electrical outlet. 2

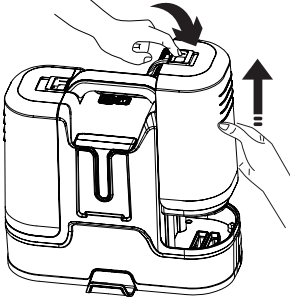

3. Remove the Clean Water Tank vertically by pulling the button of the tank. 3

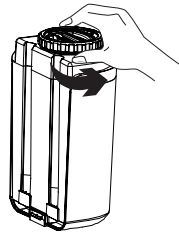


4. Twist dirty tank cap. 4

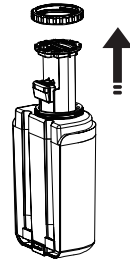


5. Remove buoy bracket. 5




6. Pour out dirty water. 6

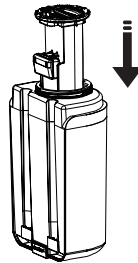


7. Place the buoy bracket. 7

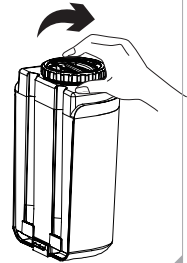

8. Cap onto dirty tank and firmly tighten. 8

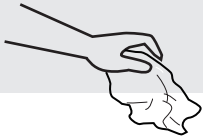


Keep Clean

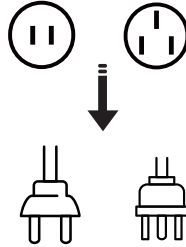


1. Unplug from the electrical outlet.




2. Remove the Clean Water Tank vertically by pulling the button of the tank.

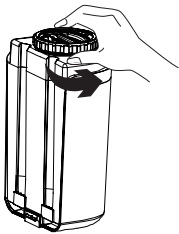


3. Twist dirty tank cap.

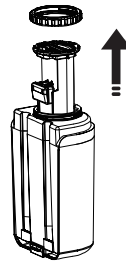


4. Remove buoy bracket.

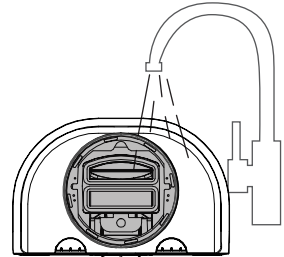


5. Hand wash the dirty water tank with clean water.

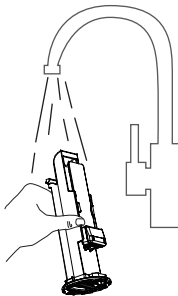

6. Wash the buoy bracket.

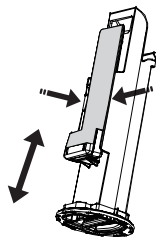










7. The buoy bracket is washable.

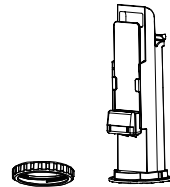

8. Make it totally dry before reassemble.



Keep Clean

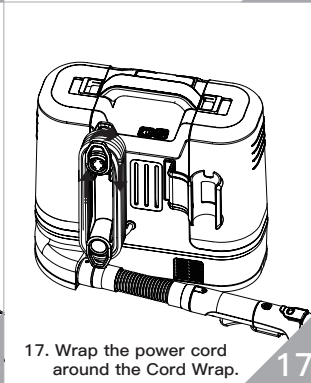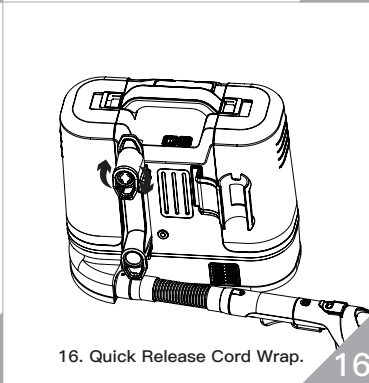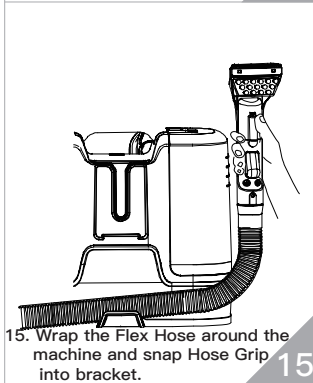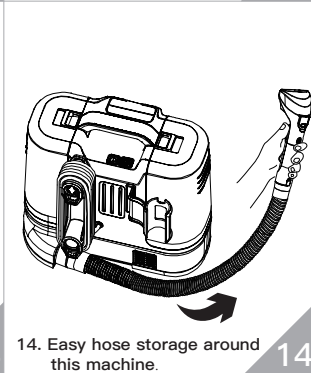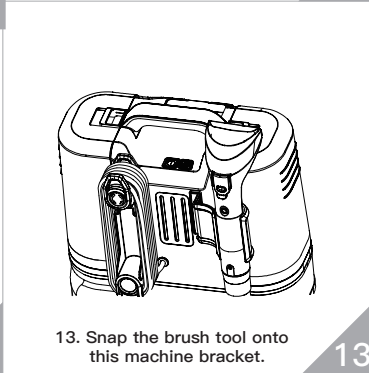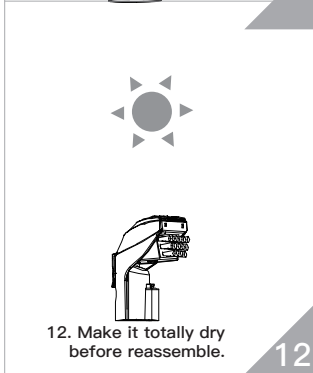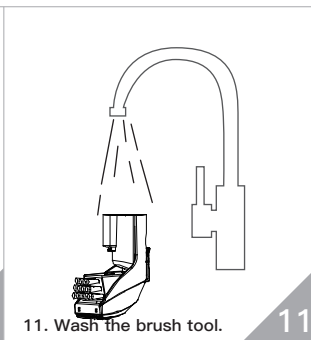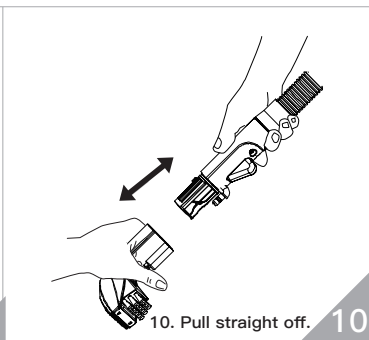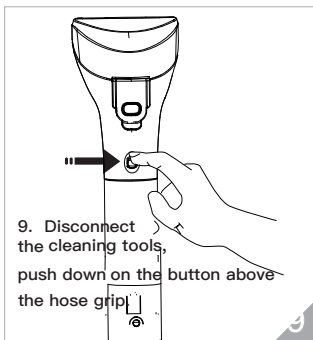



Warning

This product should not be caused by physical, sensory or mental impairments or lack of experience with use and

Use by people with common sense (including children) unless they are responsible for safety under supervision or direction.

- Children should be supervised to ensure that they do not play with this product.
- Do not use electrical appliances with damaged power cords or plugs. The power cord must be replaced if there is an abnormality.

If the appliance does not work properly, or falls down or is damaged, please contact ZEK Electronic Services service center.

K15 AC

220-240 V~, 50-60 Hz, 380-450 W



Environmental Tips

Please discard packaging materials (plastic, Styrofoam, etc.) out of the reach of children. Packaging material is present

Risk of choking in children.

- After unpacking this product, please destroy the carton, plastic bag and other packing materials. children may use
- Playing with the above materials, blankets, sheets or plastic film covering the carton or creating a confined space is dangerous.
- Dispose of this product in accordance with local or national laws and regulations.
- Before disposing of this product, please contact your local municipal or relevant government agency.



Overschiestraat 63
1062 XD Amsterdam
The Netherlands
info@cleanrite.nl