

# User Manual

## **CORDLESS SPIN MOP**

Powerful and Versatile  
Deep Clean Solution

Lightweight with Spray for  
Cleaning and Waxing



# CONTENTS

---

Important Safety Instructions.....	01
1. Product Overview.....	03
2. Assembling Handle/Battery Pack.....	04
3. Filling Water Tank .....	04
4. Choosing Cleaning Pads.....	05
5. Adjusting the Height & Angle.....	05
6. Using the Product.....	06
7. Charging .....	07
8. Care & Maintenance.....	08
9. Troubleshooting Guide.....	08
10. Specifications.....	08
Warranty (1-Year Period) .....	08
Customer Service.....	08

## Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

**Read all instructions before using (this appliance).**

1. This appliance is for household use only and is not intended for commercial purposes.
2. **DO NOT** use the appliance as a toy. Close supervision is necessary when the appliance is used by or near children. Children shall not play with the appliance. Cleaning and user maintenance shall not be conducted by children.
3. Use this appliance only for its intended use as described in the manual. **DO NOT** use attachments not recommended by the manufacturer.
4. Check all parts carefully before use. **DO NOT** use if the appliance or charger is damaged or malfunctioning.
5. **DO NOT** attempt to disassemble, repair or alter the appliance, battery pack and charger by yourself. There are no user-serviceable parts.
6. Use and store the appliance indoors only. **DO NOT** submerge in water or expose to high temperatures.
7. Use original charger only. If the charger is damaged, it must be replaced by the manufacturer or a similarly qualified person to avoid any hazards.
8. **DO NOT** handle the appliance or charger with wet hands to avoid the risk of electric shock.
9. Keep your hair, loose clothes, fingers or other parts of your body away from openings and moving parts to avoid any injuries.
10. Turn off the appliance before disconnecting it from electrical outlet. Unplug the charger when not in use and before cleaning.
11. Keep the cord away from heated surfaces. **DO NOT** use an extension cord. Plug the charger directly into a standard local outlet.
12. **DO NOT** operate near explosives and/or other flammable fumes. Sparks may be generated, possibly causing a fire.
13. Stop using the appliance immediately if abnormal noise, smell, smoke, or any other failure or breakage is found during the operation.

### About the Rechargeable Battery

1. There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
2. Do not dismantle, crush, incinerate or short-circuit battery.
3. Never expose battery to extreme temperatures or moisture.
4. Keep away from flammable materials and direct sunlight.
5. Only charge using the provided charger, cable, and/or adapters.
6. Rechargeable battery is only to be charged by an adult.
7. Adult supervision of the battery while it is charging is required.

8. Allow battery to cool to room temperature before charging.
9. Charge on a non-flammable surface and keep away from flammable products.
10. Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
11. Battery charger used with the product are to be regularly examined for damage to the cord, plug, enclose, and other parts, and in the event of such damage, it must not be used until the damage has been repaired.
12. Recycle or dispose of battery according to federal, state, and local laws.

### **About the Battery**

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
3. Alkaline batteries are recommended. Use only the specified voltage.
4. Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
5. Do not short-circuit the battery supply terminals.
6. Do not dispose of batteries in fire, batteries may explode or leak.
7. Remove batteries before storing.
8. Recycle or dispose of batteries according to federal, state and local laws.

### **SAVE THESE INSTRUCTIONS**

## **1. Specifications**

Product Name: Cordless Electric Spin Mop  
Model:

Battery Voltage: 11.1V  $\text{---}$

Input: 14V  $\text{---}$  1A

Battery: 2600mAh rechargeable battery pack  
2 x AAA batteries (included)

Charging Time: 3H


Working Time: 30mins (wet mopping); 40mins (dry mopping)

Water Tank Capacity: 330ml

Noise:  $\leq 65$ dBA

Net Weight: 3kg

## 2. Product Overview

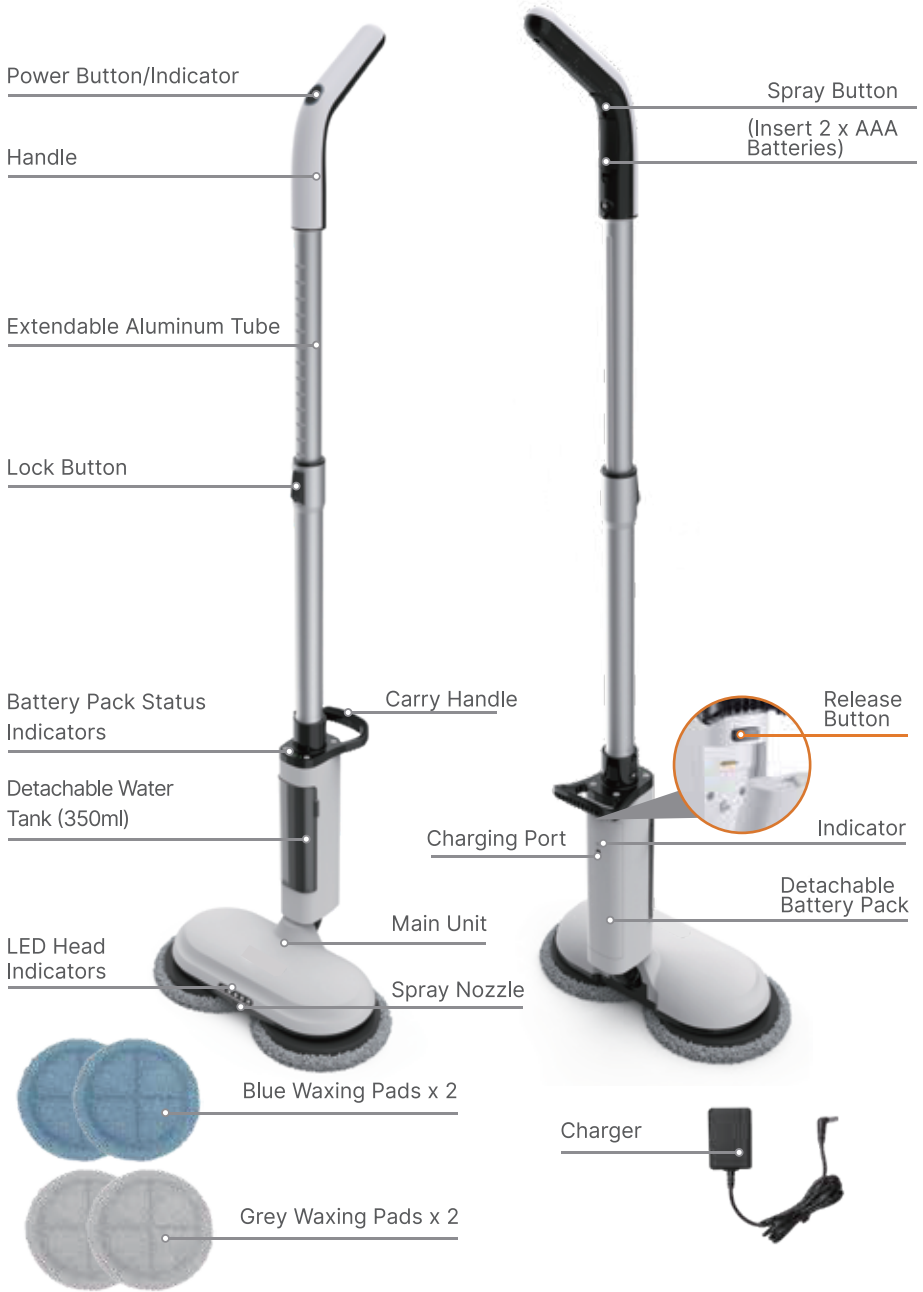

### 3. Assembling Handle/Battery Pack

- a. Attach the extendable aluminum tube to the main unit by locking the retaining pin into the slot until you hear a click.
- b. Attach the handle to the extendable aluminum tube by locking the retaining pin into the slot until you hear a click.

**Note:**

- To detach, press the retaining pins and separate each part by pulling them apart.

- c. Attach the battery pack to the main unit directly. The battery pack status indicators will light up to indicate it has been properly placed.

**Note:**

- To detach, press the release button on the top of the battery pack.



### 4. Filling Water Tank

Detach the water tank from main unit by pulling it out directly. Unscrew the cap and fill in warm (140°F/60°C max.) water. Fill in with waxing oil if you want to polish or wax the wooden floor. Then screw the cap and place the water tank back into the main unit.




**Note:**


- There is a cotton filter ring inside the notch. You can remove it when cleaning.

## 5. Choosing Cleaning Pads

a. There are 2 pairs of cleaning pads included, with one pair (grey) preinstalled on the appliance. Each pair is intended for different purposes.

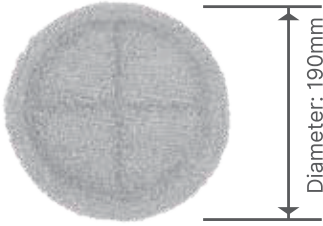

Grey Mopping Pads

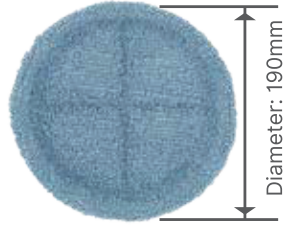


Blue Waxing Pads

b. Select the cleaning pads as needed, align the cross line in the center of the pad with the screw at the bottom of the appliance, and then fasten them on the velcro straps at the bottom.



## 6. Adjusting the Height & Angle

a. To adjust the height, push the lock button and pull the aluminum tube up or down as needed, and then release the button to lock it in place.

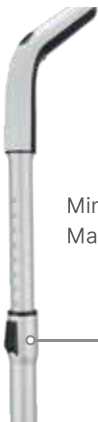

Min. Height: 41 inches/1m  
Max. Height: 53 inches/1.34m



b. To adjust the angle, gently step on the cover of the mop head and tilt the aluminum tube backwards until you hear a click, then tilt left or right as needed.



## 7. Using the Product

- a. Before use, insert provided 2 x AAA batteries into the handle.
- b. Recline the body of the appliance backwards to start cleaning.

### Button Control:

**Power Button:** Press to turn on/off the appliance. The cleaning pads will start/stop spinning.

**Spray Button:** Press to turn on/off the spraying function. The nozzle at the bottom will start/stop spraying water/wax.



### c. Indicator Light Instructions

Indicator Light	Status	Operation
Power Button Indicator	Flashes once upon each press	Turn on/off the appliance Turn on/off the spraying function
LED Head Indicators	Stay Solid	Working
	Flashing	Locked-motor protection is triggered
Battery Pack Status Indicators	Stay Solid	Working
	Flashing / No Display	Charging / No Battery
Battery Pack Indicator	Stays Solid Red	Charging
	Stays Solid Green	Fully Charged



## 8. Charging

a. Connect the charger to the battery pack and plug into an appropriate electrical outlet. The battery pack status indicators will flash while charging.

Low Battery: One indicator flashes (please charge the appliance).

Fully Charged: Four indicators remain solid.



b. Alternatively, you can detach the battery pack for charging. The sole indicator on the battery pack will remain solid red while charging.

Charging: Indicator remains solid red.

Fully Charged: Indicator turns solid green.



### Note:

- Do not turn on the appliance while charging.

## 9. Care & Maintenance

### Cleaning

a. Before cleaning, ensure that the appliance is turned off and disconnected from the electrical outlet.

b. Detach the water tank and simply wash it clean with tap water.

c. Remove the cleaning pads from the appliance, wash them in warm water and air dry. Use only liquid detergents. Do not use bleach or fabric softener. Do not iron. Do not dry clean. Ensure they are completely clean before reinstalling them to the appliance.

d. Wipe other parts clean with a piece of slightly damp cloth one by one.

**Note:** Do not wash the main unit!

### Storage

a. Place the appliance in a cool, dry place after cleaning.

b. Keep away from humidity, heat and/or corrosive gas. Keep away from all corrosive cleaners and harsh detergents.

c. Remove the removable battery pack and empty the water tank if the appliance is not in use for a long period of time. Charge the battery pack once every 2-3 months to prolong its lifespan.

## 10. Troubleshooting Guide

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
The appliance stops working suddenly or cannot be turned on	AAA batteries on the handle run out	Replace AAA batteries and restart the appliance
	The battery pack runs out	Charge the battery pack
	Built-in overheat protection is triggered	Turn off the appliance and allow it to cool off before resuming use
	Built-in over-current protection is triggered	Restart the appliance
	Built-in locked-motor protection is triggered (LED head indicators flashes continuously)	Restart the appliance
	Battery protection is triggered	Connect the charger to the battery pack and plug into the outlet to see if the sole indicator lights up. If so, unplug and restart the appliance
The appliance is vibrating / wobbling	The cleaning pads are not installed properly	Turn off the appliance and properly install the cleaning pads as instructed
The battery pack cannot be charged	Did not use the original charger	Use the original charger
	Charger is not inserted in place	Re-insert the charger
No spray or reduced spray	Water tank may be empty	Refill tank with water or waxing oil
	AAA batteries on the handle run out	Replace AAA batteries and restart the appliance
	Nozzle is clogged	Use a thin needle to gently stroke the nozzle (If you have used waxing oil before, use warm water to dissolve the waxing oil)